



**Kurz-Kasch, Inc.**


Electronics Division  
 Box 1246 • 2271 Arbor Blvd.  
 Dayton, Ohio 45439  
 Telephone (513) 299-0990

# Operating Instructions

For Model 326AB-----287C or 171C

GALAXIAN

MONWAY

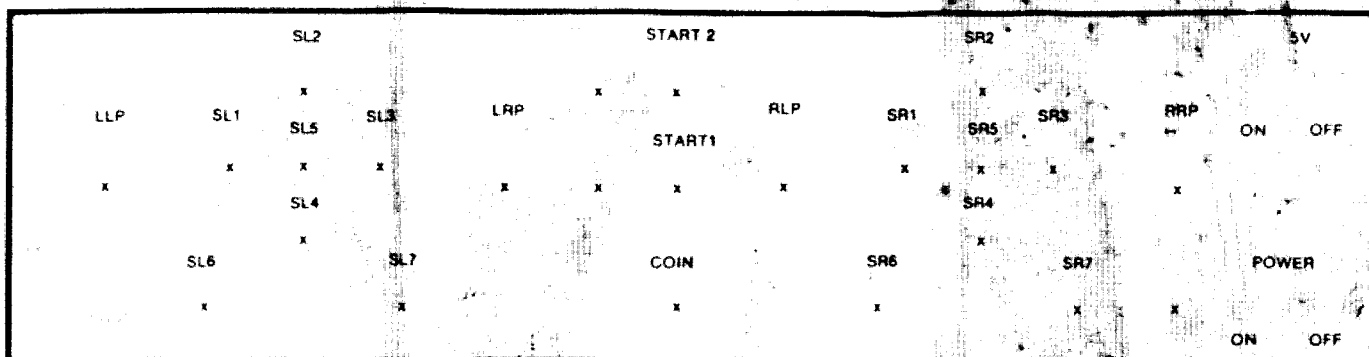

1. Insert 326B card into program "B" connector, number side up.
2. Insert 326A card into program "A" connector, number side up.
3. Insert 287C card into test fixture.
- ~~4. Insert GALAXIAN game board into 287C card.~~
5. Connect a speaker to the speaker leads.
6. Select "Table" or "Upright" on 326A card.
7. Turn on AC power.
8. Push COIN or SR-6 to coin game.
9. PUSH:      START 1 for 1 Player,   START 2 for 2 Player.

	<u>UPRIGHT</u>	<u>TABLE</u>
	SL-1      #1L	SL-1
	SL-3      #1R	SL-3
	SL-5      #1 FIRE	SL-5
	SL-1      #2L	SR-1
	SL-3      #2R	SR-3
	SL-5      #2 FIRE	SR-5

10. To check for all three colors, check for a low-going-high signal with a logic probe at pins 16, T, and U of the edge connector.

NOTE: This card set is programmed to use the black and white monitor through the TF-650.....

GROUP I

<u>LOCATION</u>	<u>TYPE</u>	<u>SIGNATURE</u>	<u>PERSONALITY BOARD</u>
U	2716	7HH3	2716/I24
V	2716	5658	2716/I24
W	2716	3F50	2716/I24
Y	2716	CUC6	2716/I24
Z	2716	7C8P	2716/I24
1H	9316	65P5	9316
1K	9316	492A	9316

GROUP II

U	9316	P224	9316
V	9316	21A7	9316
W	9316	0192	9316
Y	9316	FP6H	9316
Z	9316	UC3C	9316
1H	2316	CC2C	2716/I24
1K	2316	97P4	2716/I24

GROUP III

U	9316	715C	9316
V	9316	FA46	9316
W	9316	2A47	9316
Y	9316	3660	9316
Z	9316	3U26	9316
1H	9316	65P5	9316
1K	9316	492A	9316