



INDEX

INDEX *

△	ix, 1-13
⌋ (falling edge symbol)	2-6, 2-7, 3-4 , 3-5
⌈ (rising edge symbol)	3-4 , 3-5
⌋⌈ (rising or falling edge symbol)	2-6, 2-7, 3-4 , 3-5
◆ (glitch key, symbol)	1-3 , 2-12, 3-11, 4-2, 4-6, 4-7, 5-2, 5-4, 6-5
\$	
in Reference Memory Editor menu	6-6
in Search Pattern Entry menu	6-1
in Trigger Spec menu	4-4
◀ (symbol for left-truncated data, event fields only)	4-4
▶ (symbol for right-truncated data)	
in event fields	4-4
in State Table displays	5-7, 5-9 , 6-1, 6-5
1240D1	1-1 , 8-8
1240D2	1-1 , 8-9
9-channel grouping	3-18 , 3-19
18-channel grouping	3-18 , 3-22
accessories	8-22
ACQ#	4-15 , 4-20, 4-21, 5-7
ACQMEM (acquisition memory)	
COMPARE ACQMEM TO REFMEM (Auto-Run condition)	4-15 , 4-17
default contents of ACQMEM	5-5
general information	5-5
SWITCH DISPLAY TO ACQMEM/REFMEM soft key (State Table, Timing Diagram)	5-3, 5-5 , 5-12
ACQMEM TO REFMEM soft key (State Table, Timing Diagram)	5-3, 5-5 , 5-12
active cursor	5-1
active cursor value in Timing Diagram	
binary format	5-11 , 5-13
State Table format	5-11 , 5-13
ACTIVE MEMORY field	
in the Search Pattern Entry menu	6-2, 6-4
in the State Table and Timing Diagram	5-3, 5-5 , 5-12
ACTIVE TIMEBASES field	3-3 , 3-5
ADD LEVEL soft key (Trigger Spec menu)	4-2, 4-12
ADD LINE soft key (Search Pattern Entry menu)	6-3 , 6-4
ADD NEXT CHANNEL soft key (Channel Grouping menu)	3-20, 3-23
AFTER MEMORY FULL	4-1 , 4-3, 4-4
ASC (ASCII display radix)	3-18 , 3-19, 3-21, 8-20
ASYNC (asynchronous timebase)	3-3, 3-4 , 3-5
asynchronous clock period	3-4 , 3-5
audible trigger	4-18
AUTO key	1-2 , 1-6, 4-15
Auto-Run conditions	
COMPARE ACQMEM TO REFMEM	4-15 , 4-17, 4-20, 4-21
CONTINUOUS TRIGGER OUT	4-15, 4-16 , 4-19
STORE AFTER TRIGGER	4-15, 4-19
TRIGGER IN	4-15, 4-16 , 4-19
Auto-Run Spec menu	1-3, 1-6, 4-15

* When an index entry has more than one page reference, the one in bold type is the primary reference.

Index—1240 Operator's

back panel	1-9
BETWEEN CURSORS	4-17, 4-18
BIN (binary radix)	3-18, 3-19, 3-21
blank POD/CHAN pair ($\frac{X}{X}$)	3-19, 3-21
blanks in the data displays	5-8
C/Q line (see clock/qualifier line)	
CARD 0	3-12
CARD THRESHOLD field	3-12
CARD TYPE field	3-18, 3-19, 3-22
chained memory	3-10, 3-16
CHAN fields	3-18, 3-19, 3-21
CHANGE ACTIVE CURSOR soft key	
in Reference Memory Editor menu	6-5, 6-6
in State Table and Timing Diagram displays	5-1, 5-3, 5-12
changes, effects on other menus	1-5, 8-1 to 8-4
Channel Grouping menu	1-3, 1-6, 2-8, 3-18 to 3-23, 8-4
channel grouping, defaults	3-19, 3-23
channel polarity	3-13
channel selection fields in Timing Diagram	5-10, 5-11
cleaning the screen	1-5
CLEAR GROUP soft key (Channel Grouping menu)	3-20, 3-23
CLEAR PATTERN soft key (Search Pattern Entry menu)	6-1, 6-3
clock qualification	3-4, 3-5
clock/qualifier line (from probe)	
general information	1-13, 3-6, 3-11, 3-16
use of in clock qualification	3-4 to 3-6
use of in definition of a synchronous clock	3-4 to 3-6, 3-8
CLOCKED (global event)	3-3, 3-5, 3-6, 4-5
CLOCKS field (part of sequential event action DELAY)	4-7
clocks, OR'd (defining a synchronous clock)	3-4, 3-5
COMM pack	
COMM pack socket, back panel	1-9
COMM Port Control menu	1-3, 1-7
installing a COMM pack	1-17
list of available packs	8-22
removing a COMM pack	1-17
COMM Port Control menu	1-3, 1-7
COMPARE ACQMEM TO REFMEM (Auto-Run condition)	4-15, 4-17, 4-20, 4-21
comparison limits, COMPARE ACQMEM TO REFMEM	4-17, 4-18
CONFIG key	1-3
configuration	
configuration label, back panel	1-9
list of cards in Operation Level menu	3-1
confirmation message (PRESS "X" TO CONFIRM OPERATION (ANY OTHER HARD KEY CANCELS IT)	8-15
CONTINUOUS TRIGGER OUT (Auto-Run condition)	4-15, 4-16, 4-19
conversion charts, radix	8-20, 8-21
correlation, data	5-4, 5-6, 5-7
counter value	4-5, 5-2
CRT control, back panel	1-9
CTL1 (default group name)	3-23
CTL2 (default group name)	3-23
cursor keys	1-4
cursor locations	5-1, 5-2, 5-11
cursor movement, COMPARE ACQMEM TO REFMEM	4-20, 4-21

- cursor value in Timing Diagram
 - binary format 5-11, 5-13
 - State Table format 5-11, 5-13
- cursor Δ 2-13, 5-1, 5-2, 5-11
- cursor, search data (Search Pattern Entry menu) 6-1, 6-2
- cursors, data
 - active cursor 5-1
 - cursor 1 5-1, 5-2, 5-11
 - cursor 2 5-1, 5-2, 5-11
 - cursor locations 5-1, 5-2, 5-11
 - cursor Δ 2-13, 5-1, 5-2, 5-11
- data correlation 5-4, 5-6, 5-7
- data cursors
 - active cursor 5-1
 - cursor 1 5-1, 5-2, 5-11
 - cursor 2 5-1, 5-2, 5-11
 - cursor locations 5-1, 5-2, 5-11
 - cursor Δ 2-13, 5-1, 5-2, 5-11
- data entry keys 1-3
- DATA key 1-3
- data qualification (see storage qualification)
- default group names 3-23
- DEFAULT TRIGGER SPEC soft key (Trigger Spec menu) 4-2, 4-12
- DELAY (sequential event recognizer action) 4-7, 4-8, 4-10
- DELAY COUNTER 4-14
- DELETE CHANNEL soft key (Channel Grouping menu) 3-20, 3-23
- DELETE FILE soft key (Storage Memory Manager menu) 7-3
- DELETE LEVEL soft key (Trigger Spec menu) 4-2, 4-12
- DELETE LINE soft key (Search Pattern Entry menu) 6-3, 6-4
- Demultiplexing
 - demonstration 2-5
 - setting up the Memory Config menu 3-11, 3-14, 3-17
 - setting up timebases 3-7 to 3-9
 - with an 18-channel card 3-11, 3-17
 - with 9-channel cards 3-11
 - with T1 and T2 3-9
 - with T2 DEMUX 3-7 to 3-9, 3-11, 3-17
 - 18-channel grouping 3-22, 3-24
- DEMUX 3-3, 3-7 to 3-9, 3-17
- diagnostic lead set 1-18, 2-1, 2-2, 2-5, 8-22
- diagnostics, power-up
 - Main Diagnostics menu 1-10, 1-12
 - power-up diagnostics error messages 1-10
- differences between Operation Levels 8-17
- disable search pattern 6-1, 6-2
- DISCARD AND REACQUIRE (COMPARE ACQMEM TO REFMEM action) . 4-15, 4-17, 4-20
- DISP field (see display radix)
- DISPLAY AND REACQUIRE (COMPARE ACQMEM TO REFMEM action) . 4-15, 4-17, 4-21
- DISPLAY AND STOP (COMPARE ACQMEM TO REFMEM action) . . . 4-15, 4-17, 4-20
- DISPLAY DATA AT LEAST field 4-18
- DISPLAY NEXT CHANNEL soft key (Timing Diagram display) 5-10, 5-12
- display radix (DISP field)
 - applying display radix to acquired data 3-21
 - defaults 3-23
 - selections 3-18, 3-19

Index—1240 Operator's

DO NOTHING	
in global event recognizer	4-6
in sequential event recognizer	4-1, 4-2, 4-7
DON'T CARE key (X)	1-3
EBC (EBCDIC display radix)	3-18, 3-19, 3-21, 8-21
edge event recognition	4-10, 4-11
EDIT key	1-3
EDIT LINE VALUE field	
in Reference Memory Editor menu	6-5, 6-6
in Search Pattern Entry menu	6-1, 6-2
effects of changes to menus	1-5, 8-1 to 8-4
enable search pattern	6-1, 6-2
enabling glitch storage	3-11, 3-12
ENTER DATA FOR field	6-1, 6-2
ENTER NORMAL OPERATION soft key (Main Diagnostic menu)	1-12
error messages	
errors during operation	8-11
power-up diagnostics error messages	1-10
event	4-1
event recognizers	4-1, 4-3, 4-6
event recognition, edge vs. level	4-8, 4-9
EXECUTE keys	
AUTO key	1-2, 1-6, 4-15
START key	1-2, 4-12
STOP key	1-2, 5-1
EXISTING FILES list	7-1, 7-2, 7-5
EXPANSION field	2-13, 5-10, 5-11
EXT TRIG IN BNC (external trigger input)	
back panel location	1-9
use in Auto-Run (TRIGGER IN condition)	4-16
EXT TRIG OUT BNC (external trigger output)	
back panel location	1-9
general information	4-3
use in Auto-Run (pulsed/latched)	4-15, 4-16, 4-18, 4-19
extrapolated data in the Timing Diagram	5-6, 5-13
FILENAME field	7-2
FILETYPE field	7-2, 7-5
FILTER field	
in global event recognizer	4-5, 4-6
in sequential event recognizer	4-7, 4-9
relationship to edge and level event recognition	4-10
FIXED	4-17, 4-18
FREE STORAGE	7-2, 7-4, 7-5
glitch display	5-2, 5-4, 5-12
glitch key/symbol (◆)	1-3, 3-11, 4-2, 4-6, 4-7, 5-2, 5-4, 6-5
glitch storage	
effect on glitch triggering	3-11, 4-2
effect on other menus	8-3
enabling/disabling glitch storage in Memory Config menu	3-11, 3-12
glitch triggering	3-11, 4-2
GLITCHES (highlighting)	5-3, 5-4, 5-12

- GLITCHES ON/OFF field in Memory Config menu
 - effect of changes to this field on other menus 8-3
 - effect on glitch display 5-2, 5-4, 5-12
 - effect on glitch triggering 3-11
 - effect on 9-channel memory depth 3-11, 3-12
 - enables/disables glitch storage 3-11
- GLITCHES ON/OFF field in State Table and Timing Diagram 5-2, 5-4, 5-12
- GLOBAL EVENT = CLOCKED/UNCLOCKED field 3-3, 3-5, 3-6, 4-5
- global event recognizer
 - actions 4-6
 - clocked/unclocked 3-3 to 3-6, 4-5
 - counter/timer actions 4-5, 4-6
 - edge vs. level event recognition 4-10, 4-11
 - filter 4-5
 - general information 4-1, 4-5
 - storage qualification 4-6, 4-8
- ground leads, probe 1-13, 1-15
- group (definition) 3-18
- group name (NAME field) 3-18, 3-19
- group size, maximum 3-18, 3-19
- group timebase 3-20 to 3-22
- grouping, 9-channel 3-18, 3-19
- grouping, 18-channel 3-18, 3-22
- GRPA (default channel group name) 3-23
- GRPB (default channel group name) 3-23
- GRPC (default channel group name) 3-23
- GRPD (default channel group name) 3-23

- HEX (hexadecimal radix) 3-18, 3-19, 3-21, 8-20, 8-21
- HIGHLIGHT field 5-3, 5-4, 5-5, 5-12, 5-13
- highlighted video 1-7

- IF COUNT field 4-6
- IF TIMER field 4-6
- IMMEDIATELY 4-1, 4-3, 4-4, 5-8
- INCR CNTR (global event recognizer action) 4-5, 4-6, 5-2
- INIT 2-14, 7-1, 7-3
- INPUT field (see input radix)
- INPUT POD field 3-10, 3-13, 3-14, 3-17
- input radix (INPUT field)
 - defaults 3-23
 - selections 3-18, 3-19
- INSERT CHANNEL soft key (Channel Grouping menu) 3-20, 3-23
- inspection, incoming (Operator's Checkout Procedure) 1-18
- internal RAM, for storing setups 7-1, 7-2, 7-4

- JUMP IF/JUMP IF NOT (sequential event recognizer action) 4-7, 4-10

- keys, front panel 1-2 to 1-4

LATCHED (EXT TRIG OUT BNC)	4-15, 4-16, 4-18, 4-19
lead sets, probe	
connecting to probes	1-15
connecting to the TPG output	2-2
ground leads	1-13, 1-15
10-inch, 5-inch	1-13, 1-15
least significant channel in a group	3-18
level event recognition	4-10, 4-11
levels, operation (0-3)	3-1
levels, sequence	4-1, 4-8
LIMITS	4-17, 4-18
line voltage selector	1-8, 1-9
LOAD FILE soft key (Storage Memory Manager menu)	7-1, 7-3
LOAD FROM ACTIVE CURSOR soft key	
in Search Pattern Entry menu	6-3, 6-4
in Trigger Spec menu	4-2, 4-12
LOAD NEW PACK soft key (Storage Memory Manager menu)	7-1, 7-3 to 7-5
loading files, using the Storage Memory Manager menu	2-14, 7-1, 7-3
LOC (memory location number, State Table)	5-1, 5-2
LOOK FOR TRIGGER field	4-1, 4-3, 4-4, 5-8
Main Diagnostics menu	1-10, 1-12, 1-18
MAIN POWER SWITCH, back panel	1-8, 1-9
MASK fields	4-17
MEM DIFFS (memory differences, highlighting)	5-3, 5-4, 5-5, 5-12
memories, storing/loading with Storage Memory Manager menu	7-1, 7-4, 7-5
memory chaining	3-10, 3-16
memory comparisons	
COMPARE ACQMEM TO REFMEM (Auto-Run condition) ..	4-15, 4-17, 4-20, 4-21
comparison limits	4-17, 4-18
Memory Config menu	1-3, 1-5, 2-6, 3-10 to 3-17, 8-3
memory depth (number of samples stored per channel)	3-10
memory segment	3-10
memory width (number of channels acquiring data)	3-10
memory width vs. depth	
affect of GLITCHES ON/OFF field on 9-channel memory depth .	3-10, 3-11, 3-12
affect on memory display	5-8
for 9-channel cards	3-10, 3-12, 3-14
for 18-channel cards	3-10, 3-12, 3-15
memory window (area of memory displayed in Timing Diagram)	5-10, 5-12
menu changes	1-5, 8-1 to 8-4
MENU keys	1-3, 1-4
Menus	
descriptions	1-5 to 1-7
effects of changes on other menus	1-5, 8-1 to 8-4
overview	1-5
soft keys	1-5
most significant channel in a group	3-18
MOVE TRIGGER TO CURSOR soft key (Reference Memory Editor menu) .	6-5, 6-6
NAME field	3-18, 3-19
negative-true logic	3-13
NEW FILE VALUES fields	7-1, 7-2
NEXT HIGHLIGHT DATA soft key (State Table, Timing Diagram)	5-3, 5-5, 5-12
NEXT key	1-4
NVM (nonvolatile memory)	7-1, 7-2, 7-4

OCT (octal radix)	3-18, 3-19, 3-21, 8-20, 8-21
OFF	
display radix, group not displayed	3-18, 3-19
global event recognizer action	4-2, 4-6
highlighting selection	5-3, 5-4, 5-12
trace display selection	5-10, 5-11
ON field (part of global event filter)	4-5, 4-6, 4-11
ON/ON NOT field (global event recognizer)	4-5, 4-6
Operation Level menu	1-3, 1-5, 2-1, 2-2, 2-5, 3-1, 8-1
Operation Levels	
differences between the Operation Levels	8-17
Operation Level menu	1-3, 1-5, 2-1, 2-2, 2-5, 3-1, 8-1
options and accessories	8-22
PACK	7-1, 7-4, 7-5
PAGE field	5-8, 5-10, 5-11
PASS/FAIL diagnostic messages	1-10, 1-12, 1-18
PATTERN SEARCH ENABLED/DISABLED field	5-5, 6-1, 6-2
pattern, search	
default pattern	5-5, 6-1
enable/disable	5-5, 6-1, 6-2
entering a pattern	2-13, 6-1, 6-2
use with PATTERNS highlighting	5-5, 6-1
PATTERNS (highlighting)	5-3, 5-5, 5-12
Pod ID	
general information	1-13
in Memory Config menu	3-10, 3-14, 3-15
in Timebase menu	3-5
Pod ID button on probe	1-15
pod-timebase assignments	
affect on memory display	5-8
general information	3-11
INPUT POD field	3-13, 3-14
TIMEBASE field	3-11, 3-13, 3-14, 3-15
POD/CHAN pairs	3-18, 3-19, 3-21
POLARITY field	3-13
positive-true logic	3-13
post-trigger	4-1
power	
line voltage	1-8, 1-9
power cords	1-8
power switch, front panel	1-3, 1-8
power switch, main, back panel	1-3, 1-8, 1-9
power-up diagnostics	1-10
power-up error messages	1-10
power-up procedure	1-8
specifications	8-5
pre-trigger	4-1, 4-3, 4-8
PRESS "X" TO CONFIRM OPERATION (ANY OTHER HARD KEY CANCELS IT)	8-15
probes, data acquisition	
clock/qualifier (C/Q) line	1-13, 3-4 to 3-6
connecting to acquisition cards	1-13, 1-14
connecting to TPG outputs	2-1, 2-2
lead sets and ground leads	1-13, 1-15
list of available probes	8-22
Pod ID	1-13
Pod ID button	1-13, 1-15

PROCESSING DATA status display 4-12, 4-14
prompt messages 8-11
PULSED (EXT TRIG OUT BNC) 4-15, 4-16, 4-18, 4-19

qualifiers (clock), AND'd 3-4, 3-5
qualification (storage)
 STORE action in global event recognizer 4-6, 4-8
 WITH STORAGE field in sequential event recognizer 4-7, 4-9

radix
 applying display radix to acquired data 3-21
 conversion charts 8-20, 8-21
 default input and display radices 3-23
 display 3-18, 3-19
 input 3-18, 3-19

RAM pack
 installing a RAM or a ROM pack 1-16
 list of available packs 8-22
 RAMPACK FAIL error message 1-11
 removing a RAM or ROM pack 1-16
 using a RAM pack with Storage Memory Manager menu 7-1, 7-4, 7-5

RAM, internal 7-1, 7-2, 7-4

Reference Memory Editor menu 1-3, 1-6, 6-5, 6-6

REFMEM (reference memory)
 COMPARE ACQMEM TO REFMEM (Auto-Run condition) 4-15, 4-17
 default contents of REFMEM 5-5
 general information 5-5
 SWITCH DISPLAY TO ACQMEM/REFMEM soft key (State Table, Timing Diagram) 5-3, 5-5, 5-12

regular video 1-7

RESET
 effect of reset on counter/timer 4-8
 effect of reset on storage qualification 4-9
 sequential event action 4-1, 4-2, 4-7
 global event recognizer action 4-6

RESET IF/RESET IF NOT (sequential event recognizer action) 4-7, 4-10

reverse video 1-7

ROM pack
 installing a ROM or a RAM pack 1-16
 list of available packs 8-23
 removing a ROM or RAM pack 1-16
 ROM pack menu 1-3
 using a ROM pack with the Storage Memory Manager menu 7-1, 7-4

RS170 1-9

screen, cleaning instructions 1-5

SCROLL knob 1-4

scrolling data 5-1

search data cursor 6-1, 6-2

Search Pattern Entry menu 1-3, 1-6, 2-13, 5-5, 6-1 to 6-4

search pattern
 default pattern 5-5, 6-1
 enable/disable 5-5, 6-1, 6-2
 entering a pattern 2-13, 6-1, 6-2
 using with PATTERNS highlighting 5-5, 6-1

- SELECT keys 1-4
- SELECTED field 7-1, 7-2
- sequence level 4-1, 4-8
- sequential event recognizer
 - actions 4-7, 4-10
 - edge vs. level event recognition 4-10
 - filter 4-9
 - general information 4-1, 4-8
 - storage qualification 4-9
 - timebase selections 4-4, 4-8
- setups, storing with Storage Memory Manager menu 2-13, 7-1, 7-2, 7-4
- slot (acquisition card position) 1-13, 3-1
- SLOW CLOCK message 4-13, 4-14
- soft keys
 - ACQMEM TO REFMEM (State Table, Timing Diagram) 5-3, 5-5, 5-12
 - ADD LEVEL (Trigger Spec menu) 4-2, 4-12
 - ADD LINE (Search Pattern Entry menu) 6-3, 6-4
 - ADD NEXT CHANNEL (Channel Grouping menu) 3-20, 3-23
 - AUTO-RUN SPEC (menu soft key) 1-3, 1-6, 4-15
 - CHANGE ACTIVE CURSOR
 - in Reference Memory Editor menu 6-5, 6-6
 - in State Table and Timing Diagram displays 5-1, 5-3, 5-12
 - CHANNEL GROUPING (menu soft key) 1-3, 1-6, 2-8, 3-18 to 3-23
 - CLEAR GROUP (Channel Grouping menu) 3-20, 3-23
 - CLEAR PATTERN (Search Pattern Entry menu) 6-1, 6-3
 - DEFAULT TRIGGER SPEC (Trigger Spec menu) 4-2, 4-12
 - DELETE CHANNEL (Channel Grouping menu) 3-20, 3-23
 - DELETE FILE (Storage Memory Manager menu) 7-3
 - DELETE LEVEL (Trigger Spec menu) 4-2, 4-12
 - DELETE LINE (Search Pattern Entry menu) 6-3, 6-4
 - DISPLAY NEXT CHANNEL (Timing Diagram display) 5-10, 5-12
 - ENTER NORMAL OPERATION (Main Diagnostic menu) 1-12
 - INSERT CHANNEL (Channel Grouping menu) 3-20, 3-23
 - LOAD FILE (Storage Memory Manager menu) 7-1, 7-3
 - LOAD FROM ACTIVE CURSOR
 - in Search Pattern Entry menu 6-3, 6-4
 - in Trigger Spec menu 4-2, 4-12
 - LOAD NEW PACK (Storage Memory Manager menu) 7-1, 7-3 to 7-5
 - MAIN DIAGNOSTIC (menu soft key) 1-12
 - MEMORY CONFIG (menu soft key) 1-3, 1-5, 3-10, 3-12, 8-3
 - MOVE TRIGGER TO CURSOR (Reference Memory Editor menu) 6-5, 6-6
 - NEXT HIGHLIGHT DATA (State Table, Timing Diagram) 5-3, 5-5, 5-12
 - OPERATION LEVEL (menu soft key) 1-3, 1-5, 3-1, 8-1
 - REFERENCE MEMORY EDITOR (menu soft key) 1-3, 1-6, 6-5, 6-6
 - SEARCH PATTERN ENTRY (menu soft key) 1-3, 1-6, 5-5, 6-1, 6-2
 - STATE TABLE (menu soft key) 1-3, 1-6, 5-1, 5-2, 5-7
 - STORAGE MEMORY MANAGER (menu soft key) 1-3, 1-7, 7-1, 7-2
 - STORE NEW FILE (Storage Memory Manager menu) 7-1, 7-3
 - SWITCH DISPLAY TO ACQMEM (State Table, Timing Diagram) 5-3, 5-5, 5-12
 - SWITCH DISPLAY TO REFMEM (State Table, Timing Diagram) 5-3, 5-5, 5-12
 - TEST ALL MODULES (Main Diagnostic menu) 1-18
 - TEST THE SELECTED MODULE (Main Diagnostic menu) 1-18
 - TIMEBASE (menu soft key) 1-3, 1-5, 3-3, 3-5, 8-2
 - TIMING DIAGRAM (menu soft key) 1-3, 1-6, 5-1, 5-11, 5-13
 - TRIGGER SPEC (menu soft key) 1-3, 1-6, 4-1, 4-2
- software version 3-1

specifications	8-5 to 8-10
standard accessories	8-22
START key	1-2, 4-12
START TIMER (global event recognizer action)	4-5, 4-6, 5-11
starting data acquisition	1-2, 2-12, 4-12
State Table display	1-3, 1-6, 2-12, 5-1, 5-2, 5-7, 5-9
status displays	
COMPARE ACQMEM TO REFMEM (Auto-Run)	4-20, 4-21
PROCESSING	4-12, 4-14
TRIGGERED	4-12, 4-14
WAITING FOR TRIGGER	4-12, 4-13
STOP (stop trigger in State Table)	5-1
STOP key	1-2, 5-1
Storage Memory Manager menu	1-3, 1-7, 2-13, 7-1 to 7-5
storage (data) qualification	
STORE action in global event recognizer	4-6, 4-8
WITH STORAGE field in sequential event recognizer	4-7, 4-9
STORE (global event recognizer action)	4-6, 4-8
STORE AFTER TRIGGER (Auto-Run condition)	4-15, 4-19
STORE NEW FILE soft key (Storage Memory Manager menu)	7-1, 7-3
STORED IN field	7-1, 7-2, 7-5
storing memories in a RAM pack with Storage Memory Manager menu	7-4, 7-5
storing setups with Storage Memory Manager menu	2-13, 7-1, 7-2, 7-4
SWITCH DISPLAY TO ACQMEM soft key (State Table, Timing Diagram)	5-3, 5-5, 5-12
SWITCH DISPLAY TO REFMEM soft key (State Table, Timing Diagram)	5-3, 5-5, 5-12
SYNC (synchronous timebase)	3-3, 3-4, 3-5
T1 (timebase 1)	3-3
T1 AND T2	3-3, 3-5
T1 ONLY	3-3, 3-5
T1 VALID (highlighting)	5-3 to 5-5, 5-12, 5-13
T2 (timebase 2)	3-3
T2 F	3-7 to 3-9, 3-17
T2 L	3-7 to 3-9, 3-17
T2 ONLY	3-3, 3-5
T2 VALID (highlighting)	5-3 to 5-5, 5-12, 5-13
TB field (group timebase)	3-20 to 3-22
TEST ALL MODULES soft key (Main Diagnostic menu)	1-18
Test Pattern Generator (TPG)	
connecting probe lead sets to the TPG	2-2
general information	8-18
patterns	8-18
TPG mode	2-5, 3-1, 3-2, 8-18
TPG threshold	2-6, 3-12, 8-18
TEST THE SELECTED MODULE soft key (Main Diagnostic menu)	1-18
threshold fields in COMPARE ACQMEM TO REFMEM status displays	4-20, 4-21
THRESHOLD field (Memory Config menu)	3-12
tick marks in Timing Diagram	5-6, 5-11
time between acquisitions, COMPARE ACQMEM TO REFMEM	4-18
TIME WHILE (global event recognizer action)	4-5, 4-6, 5-11
TIMEBASE fields, (Memory Config menu)	3-11, 3-13, 3-15, 3-17
timebase fields in sequential event recognizer	4-4, 4-8
Timebase menu	1-3, 1-5, 2-6, 3-3 to 3-9, 8-2
timebases in the Search Pattern Entry menu (ENTER DATA FOR field)	6-1, 6-2
timer value	4-5, 5-11
Timing Diagram display	1-3, 1-6, 2-12, 5-1, 5-10 to 5-13
TO LEVEL field	4-7

TO OCCUR field 4-7

TPG (see Test Pattern Generator)

TPG MODE field 2-5, 3-1, 3-2, 8-18

trace name fields in Timing Diagram 5-10, 5-11

TRIG (location of trigger in State Table) 5-1, 5-2

TRIG IN (see EXT TRIG IN BNC)

TRIG OUT (see EXT TRIG OUT BNC)

TRIGGER

 final sequential event action 4-1, 4-2, 4-7

 global event recognizer action 4-6

trigger display 5-1, 5-2, 5-11

TRIGGER IF/TRIG IF NOT (sequential event recognizer action) 4-7, 4-10

TRIGGER IN (Auto-Run condition) 4-15, 4-16, 4-19

TRIGGER key 1-3

TRIGGER POSITION field 4-1 to 4-3

Trigger Spec menu 1-3, 1-6, 2-10, 4-1 to 4-14

TRIGGERED status display 4-12, 4-14

truncated data

 in event recognizer fields 4-4

 in State Table displays 5-7, 5-9, 6-1, 6-5

UNLOCKED (global event) 3-3 to 3-6, 4-5

UNUSED channels 3-18, 3-20 to 3-22

UTILITY key 1-3

video

 highlighted 1-7

 regular 1-7

 reverse 1-7

 video out BNC, back panel 1-9, 8-5

voltage, line selector 1-8, 1-9

WAIT FOR/WAIT FOR NOT (sequential event recognizer action) 4-7, 4-10

WAITING FOR TRIGGER status display 4-12, 4-13

window, memory (Timing Diagram) 5-10, 5-12

WITH STORAGE field (sequential event recognizer) 4-7, 4-9

X

X (no channel specified, Channel Grouping menu) 3-19, 3-21

X key (don't care) 1-3