


Post Adjustment

C - Conservative
M - Medium
L - Liberal

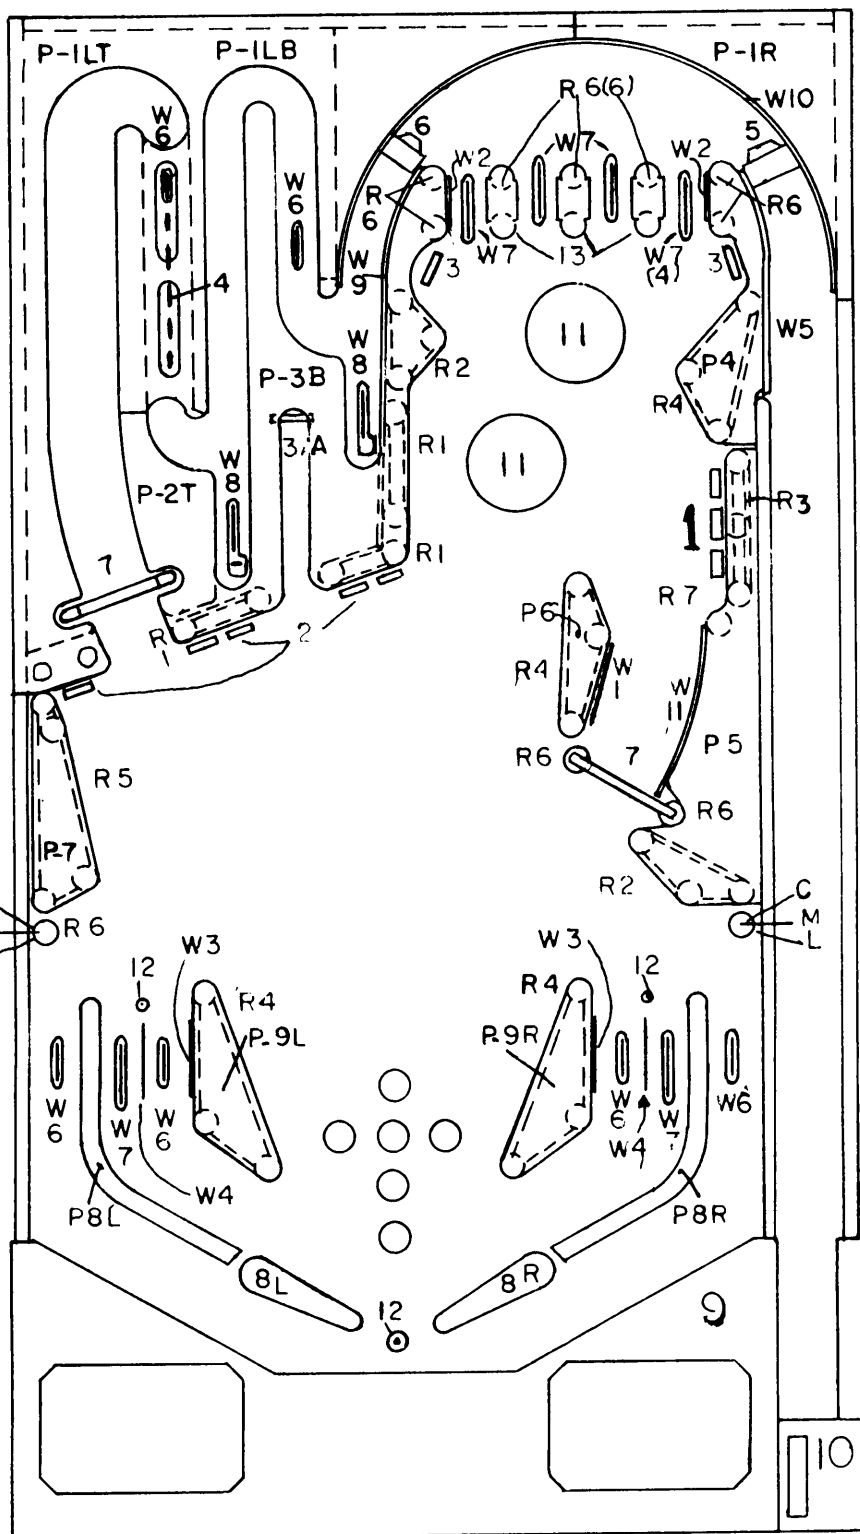

RUBBER RINGS

- R1-7A-120-125
- R2-7A-120-150
- R3-7A-120-200
- R4-7A-120-250
- R5-7A-120-300
- R6-7A-135

BALL GUIDES & ROLL-OVERS

- | | |
|-------------|-----------|
| W1-6A-101-F | W6-A-149 |
| W2-6A-101-G | W7-A-383 |
| W3-6A-101-O | W8-A-581 |
| W4-6A-101-Q | W9-B-743 |
| W5-6A-270 | W10-B-744 |
| | W11-A-745 |

PLAYFIELD PLASTIC SHIELDS

TOP ARCH SET:

- 13D-128-1LT - (Left Top)
- 13D-128-1LB - (Left Bottom)
- 13B-128-1R - (Right)
- 13D-128-2T - (Top)
- 13C-128-3B - (Bottom)

PLAYFIELD SET:

- 13A-128-4 to 9 (P4 to P9)

OTHER PARTS & ASSEMBLIES

1. 3-Bank Drop Target D-580-3-1 (Targets alone 13A-9-2)
2. 5-Bank Drop Target D-548-9A (Targets alone 13A-35-1 to -5)
3. Target Assembly A-721-L-1
- 3A. Target Assembly A-721-L-3
4. Ball Launcher Assembly B-758
5. Ball Gate Assembly A-611-R
6. Ball Gate Assembly A-611-L
7. Spin Target Assembly A-563-15 (Target & Wire Only 14A-7-14)
8. Flipper Assembly B-634-R-Y and B-634-L-Y (Right & Left) (Rubber Ring 7-A-121-Y)
9. Instruction Plate 14B-5-2
10. Shooter Gauge 14A-2-9
11. Thumper Cap 13A-41
12. Ball Guide Post 2A-200 (Rubber Ring 7A-125)
13. Ball Guide Rail 4A-110-RT

FIGURE 20. FLIGHT 2000 PLAYFIELD PARTS