


**Post Adjustment**

**C - Conservative**

**M - Medium**

**L - Liberal**

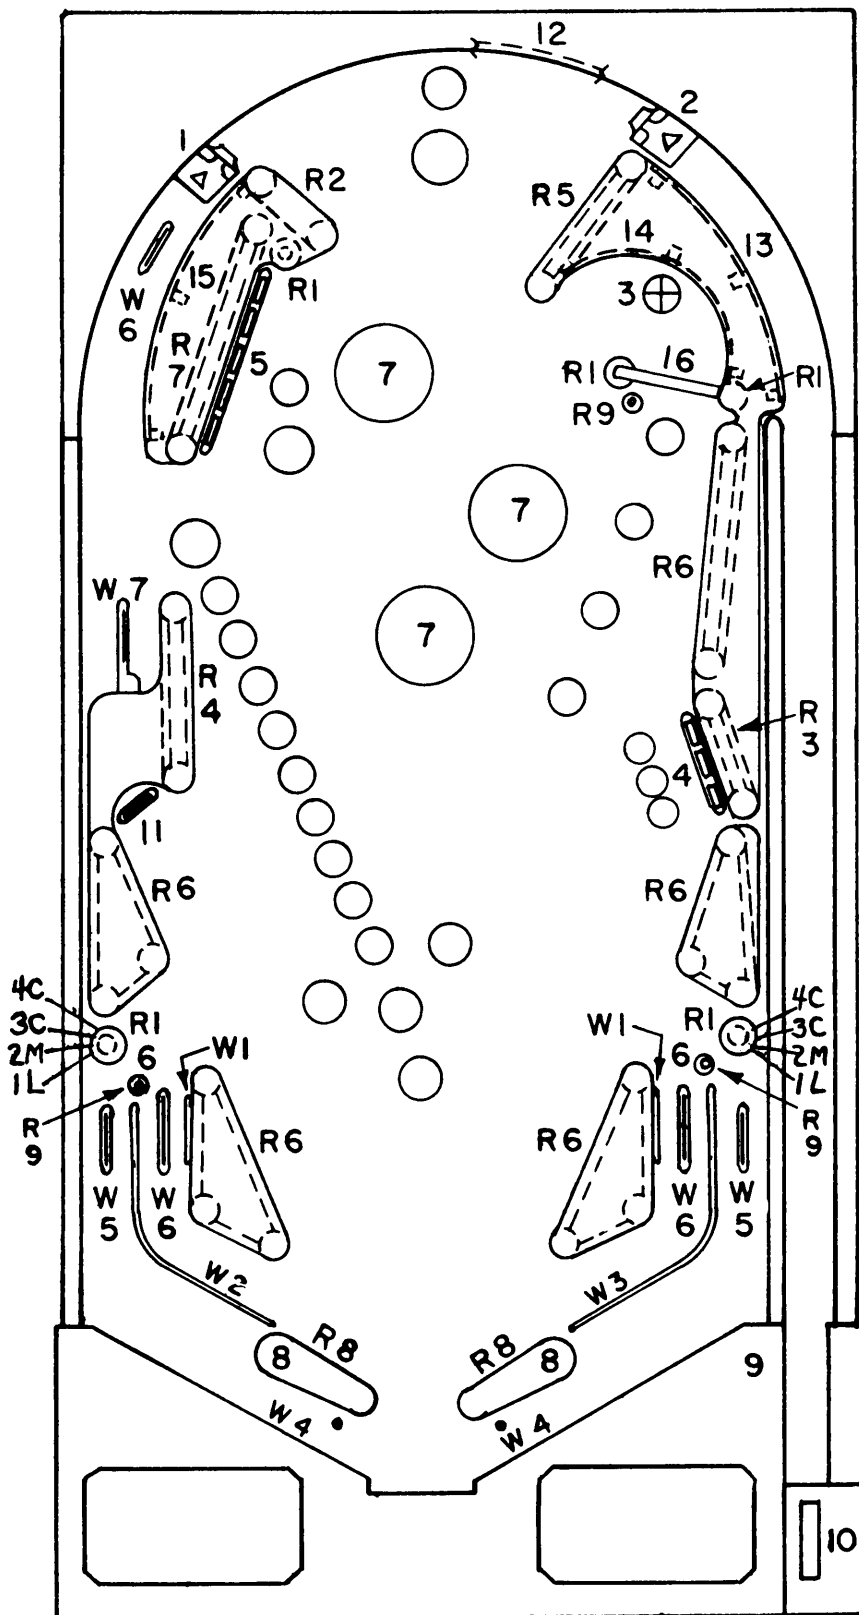

**RUBBER RINGS**

- R1-7A-120-031
- R2-7A-120-100
- R3-7A-120-150
- R4-7A-120-200
- R5-7A-120-225
- R6-7A-120-250
- R7-7A-120-300
- R8-7A-121-Y
- R9-7A-125

**GUIDE WIRE & ROLL OVER WIRE**

- W1-6A-101
- W2-6A-219
- W3-6A-227
- W4-2A-142-1
- W5-A-383
- W6-A-149
- W7-A-501

**PLAYFIELD PLASTIC SHIELDS**

- Top Arch Set 13C-102-1L & 1R
- Lectronamo Set 13A-105-1 to-6

**MISCELLANEOUS PARTS**

- 1. Ball Gate, A-104-L
- 2. Ball Gate, A-104-R
- 3. Roll Over Button 4B-241
- 4. Bank Target D-393-3C
- 5. Bank Target D-393-5A
- 6. Ball Guide Post 2A-200
- 7. Thumper Cap 13A-12-1
- 8. Flipper & Shaft A-192  
Flipper 4B-122-Y
- 9. Instruction Plate 14B-1-3
- 10. Shooter Gauge 14A-2-2
- 11. Target Ass'y A-461
- 12. Top Arch Rail 6B-222
- 13. Guide Rail Ass'y A-514
- 14. Guide Rail Ass'y A-289
- 15. Guide Rail Ass'y A-515
- 16. Spin Target B-439-3

FIGURE 5. LECTRONAMO PLAYFIELD PARTS